



**QUICK  
START  
GUIDE**

# Table Of Contents

Getting Started.....	3
Phone Features .....	3
Inserting a SIM card and Micro SD Card.....	5
Charging the Battery.....	6
Turning your Phone ON/OFF.....	7
Using On-Screen Gestures.....	8
Locking and Unlocking your Phone.....	9
Setting Up E-mail Accounts .....	10
Making and Receiving a Call.....	11
Sending a Text Message.....	11
Camera.....	12
Google™ Play Store.....	14
Installing the Apps.....	14
Uninstalling the Apps.....	15
Improving Accessibility.....	16
Connecting to Wi-Fi.....	16
Specific Absorption Rate (SAR) Safety.....	17
5GHz WiFi Notice.....	18
For our European Customers.....	19
Support and More.....	21

# Getting Started

 
Thank you for choosing the Orbic FUN+.

This guide helps you to get started with your device for the first time.

## Phone Features



**NOTE :** The screen images and icons here are for reference only since the software constantly evolves.

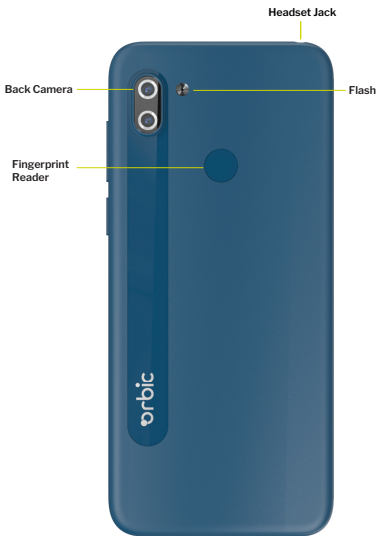

# Inserting SIM Card and MicroSD Card

Insert the SIM tool in the SIM pinhole to release the tray (as shown in the figure below). Place the SIM card in the slot with the gold contacts facing down and close the tray. Your device is now ready to be used.

The SIM tray also has a slot for microSD card that can be inserted following the steps mentioned above.

**NOTE :** The microSD card is sold seperately.

 


## Charging the Battery

Before using your device, Orbic recommends to fully charge the battery (100%).

1. Insert the smaller end (USB Type-C) into the device and the larger end (USB Type-A) into the charger adapter.
2. Plug the charger into an electrical outlet that is close to the device and is easily accessible.

**Warning!** Use only approved chargers with your device. Incompatible chargers that are tampered with may damage the device and void the warranty.

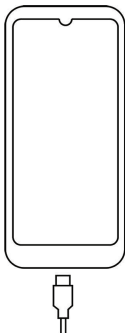

# Turning your Phone ON/OFF

 
## To Power ON/OFF Your Device

To turn ON,

- Press and hold the **Power/Lock** key.

To turn OFF,

- Press and hold the **Power/Lock** key and follow the prompts.

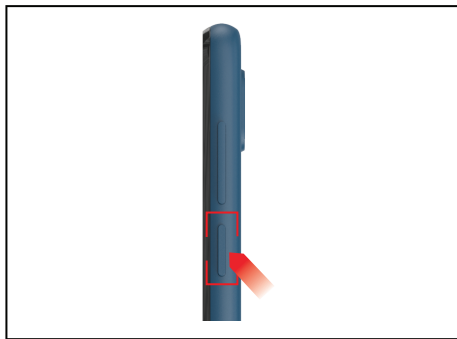

# Using On-screen Gestures

Use the on-screen gestures to move around the screen, open menus, select items, zoom in or out on web pages, and more.

- **Tap** - To open an app, select a menu item, press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.
- **Touch and hold** - Touch and hold an item or the screen for more than 2 seconds to access available options.
- **Drag** - To move an item, touch and hold it and drag it to the target position.
- **Double-Tap** - Double-tap on a web page or image to zoom in. Double-tap again to return.
- **Swipe** - Swipe to the left or right on the screen to scroll left or right. Swipe upwards or downwards to scroll through a web page or a list of items.
- **Spread and Pinch** - Spread two fingers apart on a web page, map, or image to zoom in on a part. Pinch to zoom out.



 
# Locking and Unlocking the Phone

## To Lock the Screen


- Press the **Power/Lock** key. This action prevents the accidental keypress.

## To Unlock the Screen

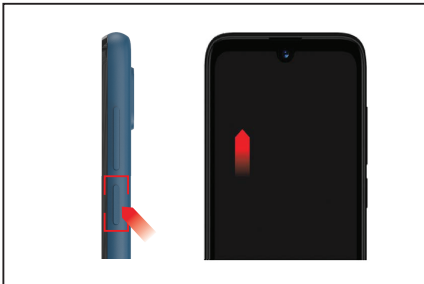


- Press the **Power/Lock** key and swipe up on the screen.



# Setting Up Email Accounts

1. Tap the **Home key** ● > swipe up for apps > **Settings**  > **Passwords & accounts** > **Add account**.
2. Tap the type of account you want to add.
3. Enter your email address and password.
4. Follow the on-screen instructions to set up your email account.





# Making and Receiving a Call

1. From the Home screen, tap  > .
2. Enter the number you want to call or the first letter of the contact's name and select the contact.
3. Tap  to place the call.

## To receive a call,



1. Tap **Answer** to answer an incoming call.

# Sending a Text Message

 
1. From the Home screen, tap  >  to compose a new message.
2. Enter the recipient's name or number in the **To** field.
3. Enter the text message.
4. To add an attachment, tap .
5. Tap  SMS to send your message.

# Camera



## Taking photos

1. From the Home screen, tap .
2. Aim the camera at the subject using the device's main display screen as a viewfinder.
3. Pinch the screen to zoom out or pinch open to zoom in.
4. Before taking a photo, you can tap on the screen icons to access various camera options and settings, if required.
5. Tap  to start capture a photos.

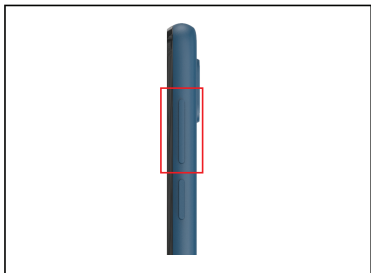**NOTE:** You can also use the volume keys to capture a photo.



## Recording videos

1. From the Home screen, tap .
2. Tap video on the screen to switch to video mode.
3. Aim the camera at the subject using the phone's main display screen as a viewfinder.
4. Pinch the screen to zoom out or pinch open to zoom in.
5. Tap  to start recording a video.

# Google™ Play Store

Find and download your favorite apps, movies and TV shows, music, books, magazines, and games. Google™, Google Play, and Android™ are trademarks of Google™ LLC.

## Installing the Apps

Your device comes preloaded with several applications, and you can download many more from the Play Store.

**NOTE:** The Play Store is an application that comes preinstalled on Android™ devices.

### To install applications from the Play Store

1. Search or browse for applications.
2. Select the desired app, download, and install.
3. Follow the on-screen instructions to complete the installation.
4. You can also uninstall, update, and manage your downloaded apps.

## Uninstalling the Apps

1. Touch and hold the app icon that you want to uninstall.
2. Tap App info, then select **Uninstall** and follow the prompts to uninstall the app.
3. Tap **OK** to confirm or **Cancel** to stop the uninstallation.

**NOTE:** Some of the preloaded apps on the device cannot be uninstalled.

# Improving Accessibility

Accessibility options are special features that make using the device easier for people who are physically handicapped.

## To set accessibility options

1. Tap **Home key** ● > swipe up for **Apps** > **Settings** ⚙️ > **Accessibility**.
2. Tap a category and set the desired options.

## Connecting to Wi-Fi

1. Tap **Home key** ● > swipe up for **Apps** > **Settings** ⚙️ > **Network and internet** > **Internet**. Make sure the Wi-Fi is turned ON.
2. Select a displayed network or tap + **Add network**.
3. Enter the network SSID and other required information.
4. Tap **Save**.



## Specific Absorption Rate (SAR) Safety

This device has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are designed for the safety of all persons and follow scientific guidelines including safety margins.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate or SAR. Tests for SAR are conducted using standardised methods, with the device transmitting at its highest certified power level in all used frequency bands.
- This device is designed and manufactured not to exceed emission limits for radio frequency (RF) energy exposure.
- This device is in compliance with the Specific Absorption Rate (SAR) for the general population or uncontrolled exposure limits (2.0W/kg and 4.0W/kg) specified in Council Recommendation 1999/519/EC and had been tested in

accordance with the measurement methods and procedures specified in EN 62209-1:2016 and EN 622092:2010+AMD1:2019.

- The highest SAR value for this model tested for use when worn on the body is 1.175W/kg (10g).
- This device meets RF exposure guidelines when used in the normal position at least 5 mm away from the body.

When a carry case, belt clip, or holder is used for body worn operation, it should not contain metal and should position the product at least 5 mm away from your body. Ensure the above separation distance instructions are followed.

## **5GHz Wi-Fi Notice (Europe and Japan)**

The Wi-Fi function for the device is restricted to indoor use only when operating in the 5150 MHz to 5350 MHz frequency range.

# For European Customers

## Device transmission frequency and power

WWAN		
Frequency Band	Maximum Output Power (dBm)	
GSM 900	33.00	
GSM 1800	30.50	
WCDMA Band I/VIII	24.50	
LTE Band 1	23.50	
LTE Band 3	23.50	
LTE Band 7	23.50	
LTE Band 8	23.50	
LTE Band 20	23.50	
LTE Band 28	23.50	
LTE Band 34	23.50	
LTE Band 38	23.50	
LTE Band 40	23.50	
WLAN		
Standard	Frequency	EIRP Power (dBm)
WIFI 2.4G	2.4~2.4835GHz	19.93
WIFI 5G	5.15~5.25GHz	15.98
	5.25~5.35GHz	17.90
	5.47~5.725GHz	17.41
	5.725~5.825GHz	13.73
BLUETOOTH		
Bluetooth Version	EIRP Power (dBm)	
EDR9	9.87	
LE	8.51	

	AT	BE	BG	CY	CZ	DE	DK
	EE	EL	ES	FI	FR	HR	HU
	IE	IT	LT	LU	LV	MT	NL
	PL	PT	RO	SE	SI	SK	UK(NI)
	CH	IS	LI	NO	TR		

**EU Regulatory Compliance** - Orbic North America LLC declares that the device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. For the declaration of conformity, visit **orbic.us**



Orbic GmbH  
C/O  
Collection Business Center  
Dreischeibenhaus  
D-40211 Düsseldorf

**Model Code** : RC609LP

**Model Name** : Orbic FUN+

## Support and More



For how to use, or more tips and tricks on getting the most out of your new Orbic FUN+, check out the guides and more information at -

**orbic.us**



