



orbic<sup>®</sup>  
TAB8  
4G<sup>™</sup>

**QUICK  
START  
GUIDE**



# Table of Contents

Getting Started.....	3
TAB8 4G Overview.....	4
Installing a SIM card.....	5
Charging the Battery.....	6
Powering ON/OFF.....	7
Google™ Account.....	8
Using On-Screen Gestures.....	9
Lock and Unlock the Device.....	10
Camera.....	11
Google™ Play Store.....	13
Installing Apps.....	13
Uninstalling Apps.....	14
Improving Accessibility.....	15
Connecting to Wi-Fi.....	15
Specific Absorption Rate (SAR) Safety.....	16
Making an Emergency Call.....	18
Support and More.....	19

## **Getting Started**

Thank you for choosing the Orbic TAB8 4G.

This guide helps you to get started with your Orbic TAB8 4G for the first time.

The TAB8 4G has built-in 4G capabilities, that can be utilised to connect to the internet anywhere and anytime.

# Orbic TAB8 4G Overview




**NOTE:** The screen images and icons here are for reference only since the software constantly evolves.

## Installing a SIM Card

Insert the SIM tool in the SIM pinhole to release the tray (as shown in the figure below). Place the SIM card in the slot with the gold contacts facing down and close the tray. Your Orbic TAB8 4G is now ready to be used.

The SIM tray also has a slot for microSD card that can be inserted following the steps mentioned above.

**NOTE :** The microSD card is sold separately.

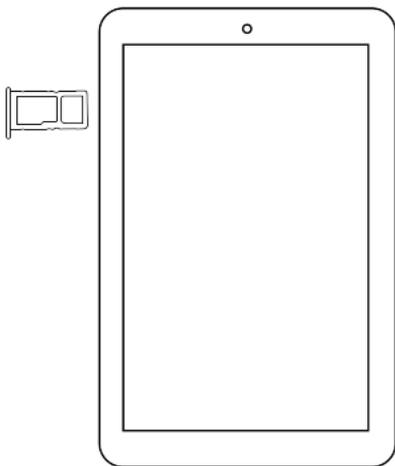

## Charging the Battery



Before using Orbic TAB8 4G, Orbic recommends to fully charge the battery ( 100% ).

1. Insert the smaller end ( USB Type-C ) into the device and the larger end ( USB Type-A ) into the charger adapter.
2. Plug the charger into an electrical outlet that is close to the Orbic TAB8 4G and is easily accessible.

**Warning!** Use only approved chargers with your Orbic TAB8 4G. Incompatible chargers that are tampered with may damage the Orbic TAB8 4G and void the warranty.

## Powering ON/OFF



### To Power ON/OFF Your Device

#### To turn ON,

- Press and hold the **Power/Lock** button.

#### To turn OFF,

- Press and hold the **Power/Lock** button and follow the prompts.

# Google™ Account

Orbic TAB8 4G uses your Google account to fully utilize its Android features, including Gmail, Google Cloud Storage, and the Google Play Store. When you turn ON your device for the first time, set up a connection with your existing Google account, or create a new Google account.

## To Sign in to your Google Account

1. Tap **Home key** ● > **Google folder** > **Gmail** .
2. Sign in to your account by entering the email address and password.

## To Create a New Account

1. Tap the **Home key** ● swipe up for **Apps** > **Settings**  > **Passwords & accounts**.
2. Tap + **Add account**.
3. Enter the email address and password.
4. Follow the prompts to set up your email account.

Google™, Google Play, and Android™ are trademarks of Google™ LLC.

## Using On-Screen Gestures

Use the on-screen gestures to move around the screen; open menus, select items, zoom in or out on web pages, and more.

- **Tap** - To open an app, select a menu item, press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.
- **Touch and hold** - Touch and hold an item or the screen for more than 2 seconds to access available options.
- **Drag** - To move an item, touch and hold it and drag it to the target position.
- **Double-Tap** - Double-tap on a web page or image to zoom in. Double-tap again to return.
- **Swipe** - Swipe to the left or right on the screen to scroll left or right. Swipe upwards or downwards to scroll through a web page or a list of items.
- **Spread and Pinch** - Spread two fingers apart on a web page, map, or image to zoom in on a part. Pinch to zoom out.

# Lock and Unlock the Device

## To Lock the Screen

- Press the **Power/Lock** button. This action prevents the accidental keypress.

## To Unlock the Screen

- Press the **Power/Lock** button and swipe up on the screen.




# Camera

## Taking Photos

1. From the Home screen, tap .
2. Aim the camera at the subject using the phone's main display screen as a viewfinder.
3. Pinch the screen to zoom in or pinch open to zoom out.
4. Before taking a photo, you can tap on the screen icons to access various camera options and settings, if required.
5. Tap  to capture a photo.

**NOTE:** You can also use the Volume keys to capture a photo.

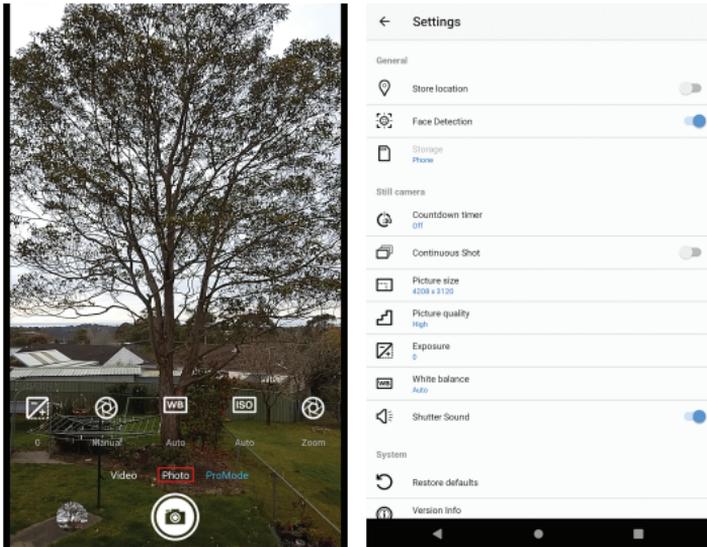

## Recording videos

1. From the Home screen, tap  .
2. Tap video on the screen to switch to the video mode.
3. Aim the camera at the subject using the phone's main display screen as a viewfinder.
4. Pinch the screen to zoom in or pinch open to zoom out.

5. Tap the white button to start recording the video
6. Pinch the screen to zoom in or pinch open to zoom out.

## **Google™ Play Store**

Find and download your favorite apps, movies and TV shows, music, books, magazines, and games.

### **Installing the Apps**

Your device comes preloaded with several applications, and you can download many more from the Play Store.

#### **Play Store**

The Play Store is an application that comes preinstalled on Android™ devices.

## To install applications from the Play Store

1. Search or browse for applications.
2. Select the desired app, download, and install.
3. Follow the on-screen instructions to complete the installation.
4. You can also uninstall, update, and manage your downloaded apps.

## Uninstalling the Apps

1. Touch and hold the app icon that you want to uninstall.
2. Tap App info, then select **Uninstall** and follow the prompts to uninstall the app.
3. Tap **OK** to confirm or **Cancel** to stop the uninstallation.

**NOTE:** Some of the preloaded apps on the device cannot to be uninstalled.

## Improving Accessibility

Accessibility options are special features that make using the Orbic TAB8 4G easier for people who are physically handicapped.

### To set accessibility options

1. Tap **Home key** ● > swipe up for apps > **Settings**  > **Accessibility**.
2. Tap a category and set the desired options.

## Connecting to Wi-Fi

1. Touch the **Home key** ● > swipe up for apps > **Settings**  > **Network and Internet** > **Internet** > **Wi-Fi**. Make sure the Wi-Fi is turned ON.
2. Select a displayed network or tap **Add network**.
3. Enter the network SSID and other required information.
4. Tap **Save**.

## **Specific Absorption Rate (SAR) Safety**

This device has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are designed for the safety of all persons and follow scientific guidelines including safety margins.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate or SAR. Tests for SAR are conducted using standardised methods, with the device transmitting at its highest certified power level in all used frequency bands.
- This device is designed and manufactured not to exceed emission limits for radio frequency (RF) energy exposure.
- This device is in compliance with the Specific Absorption Rate (SAR) for the general population or uncontrolled exposure limits (2.0W/kg and 4.0W/kg) specified in Council Recommendation 1999/519/EC and had been tested in accordance with the measurement methods and procedures specified in EN 62209-1:2016 and EN 62209-2:2010+AMD1:2019.

- The highest SAR value for this model tested for use when worn on the body is 1.285 W/kg (10 g).
- This device meets RF exposure guidelines when used in the normal position at least 0 mm away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the product at least 5 mm away from your body. Ensure the above separation distance instructions are followed.

## Making an Emergency Call

Your device supports Emergency Calling. You can call emergency services on your device when you see or have an emergency.

Emergency call service may not be available on all the mobile service providers. If you are unsure, please check with your local service providers.

Emergency service numbers are -

- International: 112
- United States: 911
- UK: 999
- Germany: 110
- Japan (Ambulance & Fire): 110
- Japan (Police): 119
- Australia: 000
- New Zealand: 111

**NOTE:** Some locations do not charge for emergency calls, so please check with your local service provider.

## Support and More



For how to use, or more tips and tricks on getting the most out of your new Orbic TAB8 4G, check out the guides and other information at [Orbic.us](http://Orbic.us).

